



\* - RELIEF VALVE MUST BE PIPED TO DRAIN IN THE FIELD BY INSTALLERS.

NOTE - ALL DIMENSIONS APPROXIMATE UNLESS OTHERWISE STATED

**VB30ETB**