



* - RELIEF VALVE MUST BE PIPED TO DRAIN IN THE FIELD BY INSTALLERS.

NOTE - ALL DIMENSIONS APPROXIMATE UNLESS OTHERWISE STATED

VB60ETB